PHILIPS

TV

LPT 166 A

→ ENG

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

Information for users in the UK

Positioning the TV

For the best results, choose a position where light does not fall directly on the screen, and at some distance away from radiators or other sources of heat. Leave a space of at least 5 cm all around the TV for ventilation, making sure that curtains, cupboards etc. cannot obstruct the air flow through the ventilation apertures. The TV is intended for use in a domestic environment only and should never be operated or stored in excessively hot or humid atmospheres.

Tips

Please take nota of the section 'Tips' at the end of the English section in this booklet.

Interference

The Department of Trade and Industry operates a Radio Investigation Service to help TV licence holders improve reception of BBC and IBA programmes where these are being spoilt by interference. If your dealer cannot help, ask at a main Post Office for the booklet 'How to Improve Television and Radio Reception'.

Mains connection

Before connecting the TV to the mains, check that the mains supply voltage corresponds to the voltage printed on the typa plate on the rear panel of the TV. If the mains voltage is different, consult your dealer.

Important

This apparatus is fitted with an approved moulded 13 Amp plug. To chenge a fuse on this type of plug proceed as follows:

1- Remove fuse cover and fuse.
2- Fix new fuse which should be a BS 1362 5A, A.S.T.A. or BSI approved type.
3- Refit the fuse cover.

If tha fittad plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

Note: The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured in accordance with the following code:
BLUE- "NEUTRAL" ("N"),
BROWN - "LIVE" ("L")

1- The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2- The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
3- Do not connect either wires to the earth terminel in the plug which is marked with the letter "E" or with the safety earth symbol or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead- not simply over the two wires.

Connecting the aerial

The aerial should be connected to the socket marked "ıı" at the back of the set. An inferior aerial is likely to result in a poor, perhaps unstable picture with ghost images and lack of contrest. Make-shift loft or set-top aerials are often inedequate. Your dealer will know from experience the most suiteble type for your locality. Should you wish to use the set in conjunction with other equipment, which connects to the aerial socket such as TV games or a video camera it is recommended thet these be connected via a combiner unit to avoid repeated connection end disconnection of the aerial plug.

Loop aerial (if provided)

The loop aerial packed with the set will give satisfactory reception under good signal conditions. Insert the aerial in the slot provided on the back of the TV. Once fixed, the aerial will remain fixed. The eeriel plug should now be inserted in the aeriel socket.

Downloaded from www.Manualslib.com manuals search engine

1 Installation

Follow the instructions very closely and step by step.
- ◦ This circle in front of a sentence indicates that you have to do something.
- ▷ This arrow in front of a sentence indicates the result of what you have done.

Text in Italic indicates help information.

ENGLISH

Place the TV on a solid base.
Leave at least 5 cm around each side of the TV for ventilation.
To prevent any faults and unsafe situations, do not place any objects on top of the sets.

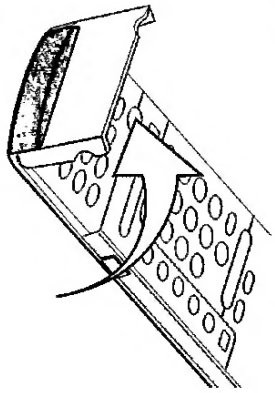

The TV can only operate at a mains voltege of 220/240 V~, 50 Hz; consult your dealer if the mains supply is different.

- ◦ Connect the TV tightly to the mains supply socket.
- ◦ Connect the aerial (indoor or outdoor) plug to the ⌐|⌐ socket on the back of the TV.

Meke sure that the connection facilities to any TV installed in your house are in good condition. Only use good quality eeriel connectors and cables.
The aerial plugs should be tightly connected.

Small screen TV's (14"/34 cm. and 15"/36 cm. TV's) are equipped with a high performance indoor aerial, nevertheless in some circumstances (specific regions or if surrounded by high buildings) reception problems could occur.
Further improvement of reception could be obtained by:
- Roteting or varying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

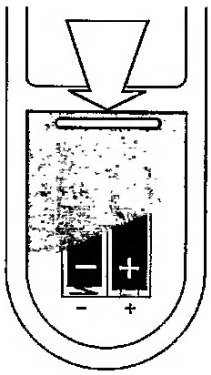

Remote control

- ◦ Remove the battery cover on the back of the remote control.
- ◦ Insert the batteries, as indicated on the remote control.
- ◦ Replace the battery cover.

The batteries supplied with the remote control of your TV do not contain the heavy metals mercury and cadmium. In many countries flat batteries may not be disposed off with your household waste. **Please ensure that batteries are disposed off in accordance with any local regulations.**

Switching TV on

- ◦ Press ⏻ on the front of the TV.
- ▷ The TV is switched on.
  Is the TV still switched off? Then the TV is on Stand-by.
- ◦ Press P — or + or a digit button on the remote control, or — or + on the TV, to switch on the TV.

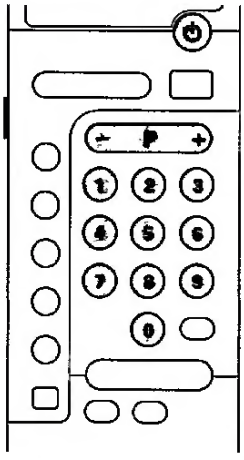

Stand-by

- ◦ By pressing ⏻ on the remote control you can temporarily switch the TV off.
- ◦ Press P — or + or a digit button on the remote control, or — or + on the TV, to switch on the TV again.

Automatic switch off

If after a period of 15 minutes no aerial signal is received, the TV automatically switches to Stand-by.

Televisions consume energy in the stand-by mode. Energy consumption contributes to air and water pollution. We advice you to switch off your TV overnight instead of leaving it on stand-by.You save energy and the picture tube is demagnetised which supports good picture quality.

Downloaded from www.Manualslib.com manuals search engine

2 Storing TV channels

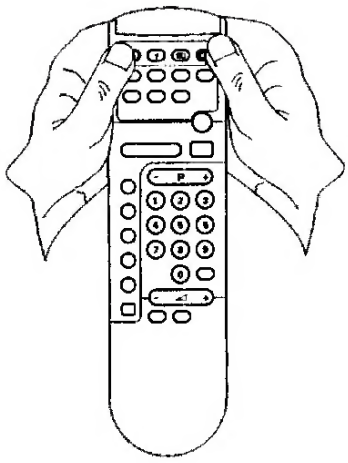

59 TV channels (1 to 59) can be stored on program numbers.
Write down the TV channels and the assigned program numbers while storing.

Important
You cannot store TV channels on program number 0.
Program number 0 is reserved to select electronic equipment connected via euroconnector (scart). See "Peripheral connections" on page 7.

Follow carefully steps **a, b, c, d.**

a.

- Press simultaneously the two ◇◇ buttons.
- The current program number is displayed on the screen.

b.

- Press ⏭ to start the search.
- The TV automatically searches until a TV channel is found.
- If you want to continue searching for a specific TV channel then press ⏭ again.

c.

- Press P — or + or one or two digit buttons to select the program number (1 to 59) where you want to store the TV channel.
- The selected program number is displayed on the screen.

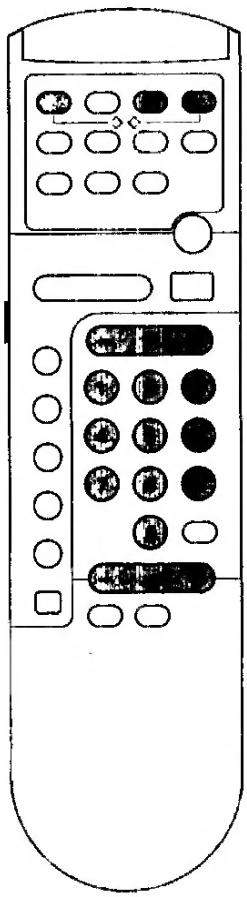

The sound-volume of some TV channels can be somewhat higher or lower than normal. If neccessary, you can adjust the sound-volume for this specific TV channel to normal sound-volume, by pressing ◿ — or +.

d.

- Press simultaneously the two ◇◇ buttons to store this selection.

Repeat steps **a, b, c, d** until all the TV channels you require have been stored on program numbers.

Storing TV channels can be stopped by pressing simultaneously the two ◇◇ buttons.

NOTE: The Y button on the remote control has no function with your TV set.

Downloaded from www.Manualslib.com manuals search engine

ATTENTION - IMPORTANT : VOLUME LEVEL

GB

Your TV has a special function that allows you to set a different volume level for each program number (see also page 2 - Storing TV channels).

If you hear a strong difference of the volume level among program numbers, re-adjust the volume level for a specific program number in the following way.

- Press ◇◇.
- The program number starts blinking.
- Press ◿ — or + to adjust the volume to a normal volume level.
- Press ◇◇ to store the new volume level.

ACHTUNG - WICHTIG: LAUTSTÄRKE

D

Ihr Fernsehgerät besitzt eine Spezialfunktion, mit der die gewünschte Lautstärke für jede einzelne Programmnummer gespeichert werden kann (siehe auch Seite ... - Speichern der Fernsehsender).

Falls die Lautstärke spezifischer Programmnummern zu laut sein sollte, können Sie sie folgendermaßen einzeln regulieren:

- ◇◇drücken.
- Die Programmnummer blinkt.
- ◿ — oder + drücken, um eine normale Lautstärke einzustellen.
- ◇◇ drücken, um die normale Lautstärke zu speichern.

ATTENTION - IMPORTANT: NIVEAU DE VOLUME

F

Votre téléviseur a une fonction spéciale qui vous permet de mémoriser un niveau de volume différent pour chaque numéro de programme (voir aussi page 2 - Mémorisation des programmes TV)

Si vous remarquez une différence excessive de niveau de volume entre numéros de programmes, procédez à un nouveau réglage du niveau de volume pour chaque numéro de programme spécifique, de la façon suivante:

- Appuyez sur ◇◇.
- Le numéro de programme clignote.
- Appuyez sur ◿ — ou+ pour régler le volume à un niveau normal.
- Appuyer sur ◇◇ pour mémoriser le nouveau niveau de volume.

ATTENTIE - BELANGRIJK: GELUIDSNIVEAU

NL

Uw TV bezit een speciale functie waarmee u een verschillend geluidsniveau voor ieder programmanummer kunt instellen (zie ook pag.2 - Vastleggen van TV-kanalen).

Wannaer er een groot verschil in geluidssterkte is tussen de programmanummers, dan kunt u het geluidsniveau voor elk specifiek programmanummer op de volgende wijze opnieuw instellen:

- Druk op ◇◇.
- Het programmanummer knippert.
- Druk op ◿ — of + om het geluid op normale sterkte in te stellen.
- Druk op ◇◇ om het nieuwe geluidsniveau vast te leggen.

ATTENZIONE - IMPORTANTE : LIVELLO DEL VOLUME

I

Il vostro TV ha una funzione speciale che vi permette di memorizzare un differente livello di volume per ogni numero di programma (consultate anche pg.2 - Memorizzare i canali TV).

Se notate una differenza nel livello di volume tra numeri di programma troppo forte, reimpostate il livello di volume par ogni specifico numero di programma nel seguente modo:

- Premete ◇◇.
- Il numero di programma lampeggia.
- Premete ◿ — o + per impostare il volume ad un livello normale.
- Premete ◇◇ per memorizzare il nuovo livello del volume.

Downloaded from www.Manualslib.com manuals search engine

ATENCION - IMPORTANTE: NIVEL DEL VOLUMEN

E

Su televisor tiene una función especial que le permite memorizar un nivel diferente de volumen para cada número de programa (consulte también pág. 2 - memorizar los canales de televisión).

Si Ud. nota una diferencia en el nivel de volumen, entre los números de programa, demasiado fuerte, vuelva a establecer el nivel de volumen para cada específico número de programa de la manera siguiente:

- Pulse ◇◇.
- El número de programa parpadea.
- Pulse ◿ — o + para establecer el volumen a un nivel normal.
- Pulse ◇◇ para memorizar el nuevo nivel de volumen.

ATENÇÃO - IMPORTANTE: NÍVEL DO VOLUME

P

O Seu TV tem uma função especial que permite memorizar um nível de volume diferente para cada número de programa (Verifique também na pág.2 - Memorização dos canais TV).

Se percebe uma diferença muito forte do nível do volume entre os números de programa, regule o nível do volume pera cade especifico número de programa na seguinte forma:

- Carregue ◇◇.
- O número de programa lampeja.
- Carregue ◿ — ou +para regular o volume num nível normal.
- Carregue ◇◇ para memorizar o novo nível do volume.

Downloaded from www.Manualslib.com manuals search engine

⏻	Bereitschaft
P	Programm
◿	Lautstärke
🔇	Ton AUS Taste
MENU	Aufruf MENU
– +	Menu Einstellungen
▣	Bildschirminformationen
PP	persönliche Grundeinstellungen
⚙	Programmeinstellung
⚲	Systemwahl TV
▣	Programmsuche
▢	Videotext Ein Aus
⇳	Seitenwechsel stop
?	Lösungen v. Spielen
◪	Überlagerung
◕	Zeitanzeige
▯	Videotext Inhaltsverzeichnis
✕	Vorübergehender Stop
⇕	Vergrößern der Seite
VCR	Videorecorder
●	Aufnahme
◀◀	Rückspulen
▶▶	Vorlauf
■	Stop
▶	Wiedergabe

D

⏻	standby stilling
P	program
◿	Lydstyrke
🔇	tavs lyd
MENU	menuvalg
– +	menu indstillinger
▣	information på skærmen
PP	personlig indstilling
⚙	indlæsning
⚲	TV systemvalg
▣	kanalsøgning
▢	tekst TV på af
⇳	stop for sideskift
?	svar på spørgsmål
◪	på billeden
◕	vis klokken
▯	tekst TV indeks
✕	kort stop for tekst TV
⇕	forstørrelse af sujen
VCR	videobåndoptager
●	optag
◀◀	tilbagespol
▶▶	fremspol
■	stop
▶	afspil

DK

⏻	posición de espera
P	programa
◿	volumen
🔇	anulación del sonido
MENU	selección menú
– +	menú regulaciones
▣	informac. en la pantalla
PP	preferencia personal
⚙	instalación
⚲	selección sistema TV
▣	búsqueda de progr.
▢	teletexto activar desconectar
⇳	parada alternancia pág.
?	informaciones secretas
◪	superposición
◕	visualizar hora
▯	indice teletexto
✕	parada provis. teletex.
⇕	ampliación página
VCR	video
●	registración
◀◀	rebobinado
▶▶	avance
■	stop
▶	reproduccion

E

⏻	Position Veille
P	Programme
◿	Volume
🔇	Coupure son
⏻	Position Veille
MENU	Appel menu
– +	Menu Reglages
▣	Information sur l'ecran
PP	Retour aux pre reglages
⚙	Installation
⚲	Selection du système TV
▣	Recherche programmes
▢	teletexte marche arret
⇳	Arret alternance de page
?	Solution des jeux
◪	Superposition teletexte
◕	Affichage de l'heure
▯	Index teletexte
✕	Arret provisoire teletexte
⇕	Agrandissement page
VCR	Magnetoscope
●	Enregistrement
◀◀	Rebobinage
▶▶	Bobinage
■	Arret
▶	Lecture

F

⏻	stand by
P	program
◿	volume
🔇	mute
MENU	menu selection
– +	menu adjustments
▣	On Screen Display
PP	personal preference
⚙	installing
⚲	TV system selection
▣	channels search
▢	Teletext on off
⇳	hold page
?	reveal information
◪	overlay
◕	hour display
▯	Teletext index
✕	temporary interruption
⇕	enlarge a page
VCR	video recorder
●	record
◀◀	rewind
▶▶	wind
■	stop
▶	play

GB

⏻	posizione d'attesa
P	programma
◿	volume
🔇	muto audio
MENU	selezione menu
– +	menu regolazioni
▣	inform. sullo schermo
PP	preferenza personale
⚙	installazione
⚲	selezione del sist. TV
▣	ricerca programmi
▢	Televideo acc. spento
⇳	arresto altern. pagine
?	informazioni nascoste
◪	sovrapposizione
◕	ora
▯	Indice Televideo
✕	interr. temp. Televideo
⇕	ingrandimento pagina
VCR	videoregistratore
●	registrazione
◀◀	riavvolgimento
▶▶	avvolgimento
■	stop
▶	riproduzione

I

⏻	stand by
P	programma
◿	volum
🔇	muting
MENU	hente meny
– +	menu justeringer
▣	visning på skjermen
PP	personlig preferanse
⚙	installasjon
⚲	valg av TV-system
▣	søking etter kanaler
▢	Tekst-TV på-av
⇳	stopp siderulling
?	løsning på spill
◪	miksing
◕	visning av tid
▯	Tekst-TV indeks
✕	midlertidig avbrudd
⇕	fostorrelse av side
VCR	videospiller
●	opptak
◀◀	tilbakespoling
▶▶	frem spoling
■	stopp
▶	avspilling

N

⏻	stand by (wachtstand)
P	programma
◿	volume
🔇	afzetten v h geluid
MENU	inschakelen MENU
– +	menu-regelingen
▣	inform. op het scherm
PP	persoonlijke voorkeur
⚙	installatie
⚲	keuze v h TV-systeem
▣	opzoeken v. program.
▢	teletekst aan uit
⇳	roulerende pag.'s stopzetten
?	verborgen informatie
◪	teletekst over beeld
◕	tijd opvragen
▯	teletekst index
✕	tijdelijke onderbreking
⇕	vergroten pagina
VCR	videorecorder
●	opnemen
◀◀	terugspoelen
▶▶	vooruitspoelen
■	stoppen
▶	weergeven

NL

⏻	Posição de espera
P	Programa
◿	Volume
🔇	Tecla silêncio
MENU	Selecção menu
– +	Menu Regulações
▣	Informações no ecran
PP	Ajuste preferido
⚙	Instalação
⚲	Selecção do sistema TV
▣	Busca dos programas
▢	Teletexto activação desactivação
⇳	Paragem alternância pag.
?	Solução dos jogos
◪	Sobreposição
◕	Hora
▯	Indice Teletexto
✕	Paragem temp. do video
⇕	Ampliação página
VCR	Gravador de video
●	Gravação
◀◀	Rebobinamento
▶▶	Enrolamento
■	Stop
▶	Reprodução

P

⏻	Beredskapsläge
P	Program
◿	Ljudvolym
🔇	Bortkoppling av ljudet
MENU	Val av menyn
– +	menu-Inställningar
▣	Info på bildskärmen
PP	Personlig installning
⚙	Installation
⚲	Val av TV system
▣	Programsökning
▢	Tekst-TV Till Från
⇳	Stopp sidväxling
?	Dold information
◪	Mixning
◕	Tidsindikering
▯	Text-TV Index
✕	Tillfälligt stopp Text-TV
⇕	Förstoring av sida
VCR	Videobandspelaren
●	Inspelning
◀◀	Återspolning
▶▶	Framspolning
■	Stopp
▶	Återgivning

S

⏻	valmiustoiminto
P	ohjelma
◿	äänenvoimakkuus
🔇	äänen katkaiseminen
MENU	paamenun valinta
– +	menu-saadot
▣	kuvaruutunayttö
PP	säätojen palautus
⚙	asennus
⚲	järjestelman valinta TV
▣	kanavien haku
▢	teksti-TV:n kytkenta kaikaisu
⇳	sivunvaihdon pysaytys
?	piilotekstin näyttö
◪	TV teksti-TV
◕	ajan naytto
▯	etusivun palautus
✕	teksti-TV:n keskeytys
⇕	tekstin suurentaminen
VCR	kuvanauhuri
●	tallennus
◀◀	kelaus taaksepain
▶▶	kelaus eteenpain
■	pysaytys
▶	toisto

SF

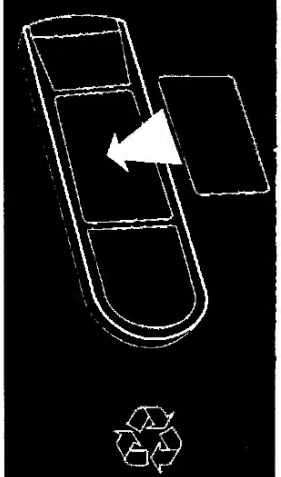

3119 105 2282.1

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Auto Programming

The Auto Programming function can be used to find and store all available channels quickly. Channels are stored on program numbers in the same sequence as they are found.
After Auto Programming is started, the TV starts searching for a channel. If a channel is found, it will be automatically stored on program number 1. Searching will start again automatically. If another channel is found, it will be stored on program 2, etc.

At the end of the Auto Programming cycle the TV switches to program 1.

- Press simultaneously the two ◇◇ buttons longer than 4 seconds to start the Auto Programming.

The Auto programming is stopped by pressing simultaneously the two ◇◇ buttons.

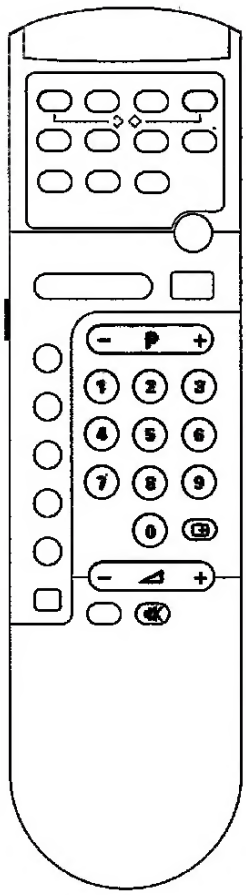

Operation

On Screen Display

The On Screen Display information allows you to see the program number on which a TV channel is stored, the timer status and a moving bar if the volume is adjusted.

- Press ⊡ to display information on the screen.
- Press ⊡ again to switch off informetion.

Selecting TV channels

- Press P — or + or press one or two digit buttons on the remote control. To select e progrem number from 0 to 9 press one digit button. To select a program number from 10 to 59 you must press two digit buttons in less than 4 seconds.

or

- Press — or + on the TV.

Volume control

- Press ◿ — or + on the remote control.

Interrupting the sound

- Press 🔇 to switch off the sound.
- Press 🔇 again or ◿ + to switch on the sound.

Downloaded from www.Manualslib.com manuals search engine

Menu on screen

With the menu on the screen you can change and store the picture and sound settings. Also you can set the timer.
When you switch on your TV, the picture and sound settings have certain values. These values are initially stored by the factory. Using the menu on screen you can change these values. Also if you store these values (by pressing simultaneously the two ◇◇ buttons after a change), the TV will switch on with your stored picture and sound values.

The stored picture and sound values can also be recalled by pressing **PP**.

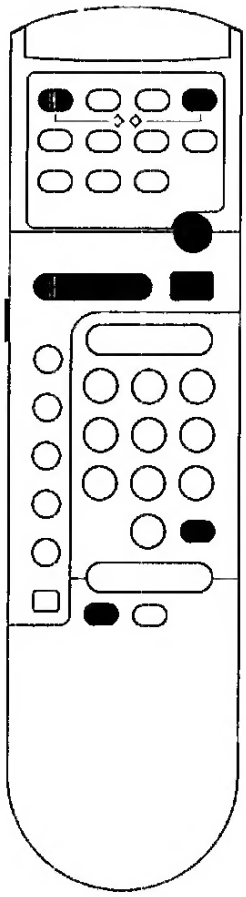

- Press MENU.
- ▹ **VOLUME** appears, adjust the volume by pressing — or +.
  If you want to store this setting press simultaneously the two ◇◇ buttons.

- Press MENU again.
- ▹ **BRIGHTNESS** appears, adjust the brightness by pressing — or +.
  If you want to store this setting press simultaneously the two ◇◇ buttons.

- Press MENU again.
- ▹ **CONTRAST** appears, adjust the contrast by pressing — or +.
  If you want to store this setting press simultaneously the two ◇◇ buttons.

- Press MENU again.

- ▹ **SHARPNESS** appears (this function is only present on certain TV models).
- ▹ Press + to obtain a very sharp image (HIGH) or press — to obtain a normal sharp image (LOW).
  Under poor reception circumstances always select LOW.
  If you want to store this setting press simultaneously the two ◇◇ buttons.
- Press MENU again.

- ▹ **COLOUR** appears, adjust the colour by pressing — or +.
  If you want to store this setting press simultaneously the two ◇◇ buttons.

- Press MENU again.
- ▹ **TIMER** appears.
  The timer can be used to switch on or off the TV automatically after the time you want. You can set the time after which the TV switches on or off in steps of 10 minutes to a maximum of 24.00 hours.

Switching off automatically:

- Press — or + to select the time after which the TV should switch off.
  The count down starts immediately. You can see the remaining time by pressing ⊡ on the remote control.
  During the final minute of the selected time period, the seconds remaining are automatically shown on the screen.
  At the end of this time period the TV switches to stand-by mode.

Switching on automatically:

- Press — or + to select the time after which the TV should switch on.
  The count down starts immediately.
- Press ⏻ to switch the TV temporarily off.
- ▹ The TV will switch on after the time you have selected.

Note: If you switch on your TV again before the selected time has elapsed, the timer will be switched off automatically.
If you do not press any button within 3 hours after the TV has switched on automatically, the TV will switch automatically to Stand-by again.

If you want to stop the TIMER press — or + until the selected period on the screen is 00.00.

- Press MENU.
- ▹ The menu disappears.

If you want to leave the menu, for example after changing the contrast setting, you can either wait approximately 15 seconds or continue to press the MENU *button until the menu disappears from the screen.*

Downloaded from www.Manualslib.com manuals search engine

Teletext

A number of TV channels broadcast information via teletext. Telatext is an information system which can be consulted the same way as a newspaper or megezine.

ENGLISH

Teletext Time

The time can only be called up if the TV channel you are watching is also broadcasting teletext.

- Press ◕.
- The time appaars.
- Press ◕ again to switch off the time.

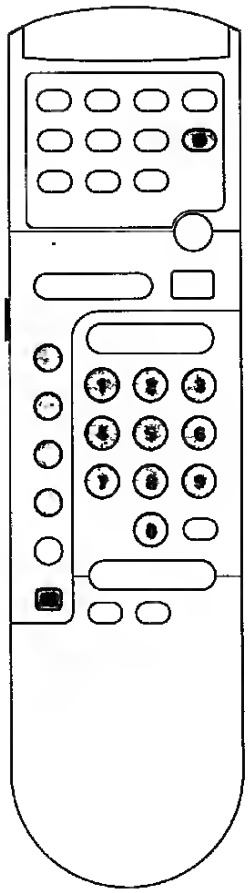

Switching Teletext On and Off

- Select tha TV chennel for the desired teletext broadcast.
- Press ▤ to switch on the teletext.
- The contents appear on the screen together with an information line at the top.

In the information line appears:

- the number of the page requested.
- the page counter.
- date and time.

- only **P 100** if there is no teletext broadcast.

- Press ▤ again to switch off the teletext.
- The TV channel reappears.

Selecting a Teletext Page

Direct page selection

- Enter the desired page number with the digit buttons. The number of pages always includes 3 digits.
- The page counter seeks the page.
- If the counter keeps searching, then the page is not available or does not exist.

Does **P ?...** *appear or have you entered an incorrect number? First complete the number with random figures and then enter the correct page number again.*

Selection with the options line

Signs red — and blue + of the option line enable the direct selection of the following or the previous page.

- Press the red button or the blue button on the remote control to select either the previous or the following page.

or

Certain teletext systems ellows a quicker access to the headings; in this cese the section names are displayed in the option line.

- Select the desired subject with the corresponding colour button on the remote control.

Downloaded from www.Manualslib.com manuals search engine

Special teletext functions

Hold a rotating page
Sometimes the information is contained on several pages following each other. In this case they are automatically displayed in rotation. The total number of subpages and the subpage displayed are indicated on the screen. For example: 1/4, meaning page 1 out of 4 is being displayed.
- ◦ Press ⇳ to hold a page.
- ▷ ⇳ appears in the information line.
  The information in this subpage is not being updated anymora.
- ◦ Press ⇳ again.
- ▷ The page rotation starts again.

Reveal concealed information
Some pages contain concealed information, such as solutions to riddles and puzzles.
- ◦ Press ? to call up concealed information.
- ◦ Press ? again to switch off the concealed information.

Overlay of the teletext on the TV image
- ◦ Press ⧄.
- ▷ The teletext page is superimposed over the TV program on the screen.
- ◦ Press ⧄ again.
- ▷ Only the teletext page is displayed.

Selecting a specific subpage
Sometimes the information is contained on several pages following each other. By adding a subcode you can call up a subpage and hold it.
- ◦ Enter the page number.
- ◦ Press ◕.
- ◦ Enter the subpage with 4 digits: e.g. 0003 for subpage 3.
  In the meantime, you may return to the picture broadcasted from the TV channel.
- ◦ Press X.
- ▷ The TV channel appears.
  ▤ indicates that you are still in the teletext mode. When the page has been found, the information line appears on your screen.
- ◦ Press X again.
- ▷ Teletext reappears.

- ◦ Press ◕ to return to the normal teletext function.

Return to the contents
- ◦ Press ⓘ or the white button.
- ▷ The table of contents will appear.

Temporary interrupt of the teletext display
The search for a page may sometimes be quite long. In the meantime, you may return to the picture broadcasted from the TV channel. Before interrupting teletext, you can select a page number.
- ◦ Press X.
- ▷ The TV channel appears.
  ▤ indicates that you are still in the teletext mode. When the page has been found, the information line appears briefly on your screen.
- ◦ Press X again.
- ▷ Teletext reappears.

Enlarge a page
- ◦ Press ⇕ to enlarge the top half of the teletext page.
- ◦ Prass ⇕ again to enlarge the bottom half of the teletext page.
- ◦ Press ⇕ once more to return to normal page size.

Teletext can always be switched off by pressing ▤.

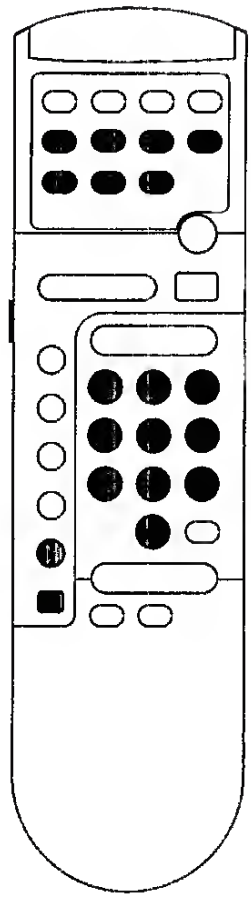

Downloaded from www.Manualslib.com manuals search engine

Peripheral connections

Using the TV remote control for the videorecorder

You can use your TV remote control to operate most of the videorecorders of our range.

- Press and hold the VCR button, then press the buttons you need to operete your videorecorder. Refer to the videorecorder instruction for use to see the related buttons and functions.

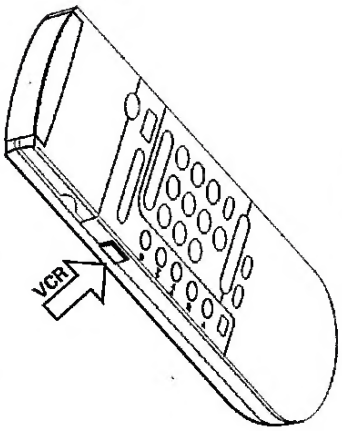

Aerial connection

You can connect your videorecorder or other equipment via the aerial connection on the back of the TV.

- Unplug the aerial plug from your TV and insert it into the aerial input of your equipment.
- Connect another aerial plug to the output TV of your equipment, connect the other side to the eeriel input of your TV.
- Switch on your equipment.
- Check in the handbook of the particular equipment to see what the test signal looks like.
- Now, refer to the section **Storing TV channels** to search for and store this signal on a programme number from 1 to 59 (you cannot store the signal on the program number 0). After that, you can receive signals from your equipment on this programme number.

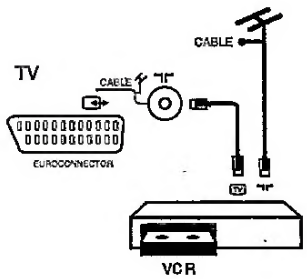

Euroconnection (scart) for e.g. videorecorder

You can connect for example a videorecorder or setellite tuner to your TV via the euroconnector socket on the back of the TV. Ask your dealer for the appropriate cable.

- Connect the eurocable to the euroconnector socket of your videorecorder or electronic equipment and to the euroconnector socket of your TV.
- Connect an aerial cable to the output TV of your video recorder and to the aerial input of your TV.
- Normally if the electronic equipment is switched on, the picture will automatically appear on the TV screen.
  To select the electronic equipment manually, select program number 0.
  Progrem number 0 is reserved by the fectory to select electronic equipment connected via eurocable.

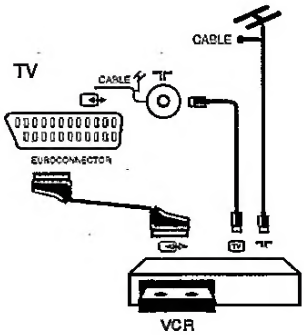

Euroconnection (scart) for audio amplifier

An externel audio emplifier can be used to listen to your TV sound.
In this case you need a special euroconnector cable, provided with audio out plugs. Ask your dealer for an appropriate cable.

- Connect the audio plugs into the eudio input of your audio emplifier.
- Connect the euroconnector into the euroconnector socket of your TV.

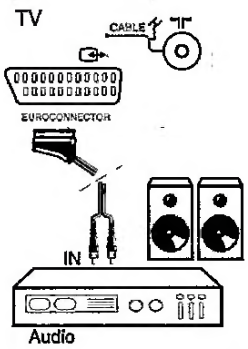

Downloaded from www.Manualslib.com manuals search engine

Headphones

- Connect the headphones plug to the headphones socket on front of the TV.
- The internal loudspeakers of your TV are automatically switched off.

Audio/Video input

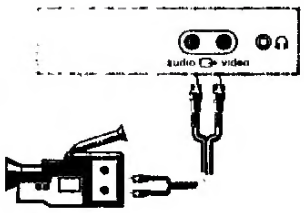

Audio/Video input is only present on certain TV models.

You can connect audio-video equipment, like a camcorder or game-computer, to the Audio/Video input on the front of your TV. Ask your dealer for an appropriate cable.

- Connect your equipment to the Audio/Video input of your TV.
- Press START or PLAY on your equipment.
- Select program number 0.
- The picture from your equipment appears on the screen.

NOTE: Do not use the Audio/Video input and the Euroconnection at the same time.

Tips

To clean the TV
Clean the TV using a slightly damp chamois leather.
Never use aggressive cleaning agents.

Poor or no picture:
Are the plugs tightly connected to the aerial socket and are the connection facilities to any other installed TV in good condition? Do you use good quality aerial connectors and cables?
If an indoor aerial is used, refer to the section "Installation" to improve the reception.

No picture from electronic equipment connected via euroconnector or via Audio Video input:
Did you try selecting program 0? Is the electronic equipment switched on and is START or PLAY pressed?

No solution:
Switch your TV off and on again with the ⏻ button.
Never attempt to repair a defective TV set yourself.
Switch off the TV and call your dealer or TV-technician when nothing helps or when:

- A white horizontal stripe appears across the whole screen.
- The red lamp below the screen starts blinking when no buttons are pressed on the remote control.

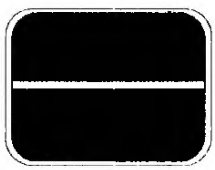

Environmental information
Your TV contains material which can be recycled and reused. At end of life specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the ammount of materials to be disposed of.
Please find out about local regulations on disposal of your old TV set.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Printed on recycled paper
Stampato su carta riciclata

15PT166A
17PT166A
21PT165A
21PT166A

Printed in Italy by G S F 95 12 11 10 9 8 7 6 5 4 3 2 1

RC 3119 105 2261 3

Downloaded from www.Manualslib.com manuals search engine